

How to update SW for UHF5 model

Main F/W update

1. Ready USB

- Extract *.zip

- **Copy *.bin file to USB root path(Do not copy *.zip file to USB Root Path)**

- Recommend to use empty USB

- USB file system should be FAT32 format

(Please check this again when the USB not recognized on UHF5)



2. Update SW on menu

- Main menu > Support > Software Update

- UHF5 device will search USB whether valid file exist or not

- Select OK for start update

3. Reboot automatically after SW update

STM32 F/W update

1. STM32 SW included on Main F/W. So doesn't need to ready separate FW.

2. Enter to Factory menu

- SVC > Upgrade > STM32 F/W upgrade

3. Wait message display during update

4. Reboot automatically after finish SW update